

Service Hint

Product:	LCD TV
Number:	SH-B32-16-02_REV2
Date:	June 2016

CS Group
 Product Engineering Division
 Two Riverfront Plaza, Newark, NJ 07102-5490
 A Unit of Panasonic Consumer Electronics Company

Model(s):
TC-50CX400U, TC-55CX400U,
TC-55CX420U, TC-65CX400U, TC-65CX420U

Copy and file this Hint with the respective Service Manual(s)

Service Parts (major) look-up table for ODM 4K TV Models
REV – Module Ass'y for 55CX420U last digit change
REV2 – Mainboard part # change

Description	TC-65CX420U	TC-65CX400U	TC-55CX420U	TC-55CX400U	TC-50CX400U
Mainboard	890-M00-06NCB-G	890-M00-06NCB	890-M00-06NBZ-G	890-M00-06NBZ	890-M00-06ND1
Power board	890-PM0-3234	890-PM0-3234	890-PM0-5521	890-PM0-5521	890-PM0-5522
MST6M50 120Hz ME/MC board	890-109-6M50	890-109-6M50	890-109-6M50	890-109-6M50	890-110-6M50
Keypad board	890-K00-2129	890-K00-2129	89A-K02-2202	89A-K02-2202	89A-K02-2202
IR board	89A-R11-2199	89A-R11-2199	89A-R10-2199	89A-R10-2199	89A-R09-2199
Accessory	002-805-PANA	002-805-PANA	002-803-PANA	002-803-PANA	002-802-PANA
Carton	005-007-PANA	005-006-PANA	005-004-PANA	005-004-PANA	005-003-PANA
VESA screw	N/A	N/A	N/A	N/A	113-000-D050
Bottom Carton	005-00L-W065	005-00L-W065	005-03L-D055	005-03L-D055	N/A
Hanging adapter riveting column	113-000-W065	113-000-W065	N/A	N/A	N/A
Plastic back cover	151-M00-W065	151-M00-W065	151-001-W05571	151-001-W05571	151-000-W05071
Left foot holds components	154-001-W065	154-001-W065	N/A	N/A	N/A
Right foot holds components	154-004-W065	154-004-W065	N/A	N/A	N/A
Stand-Left Assy.	N/A	N/A	151-700-W05073	151-700-W05073	151-700-W05073
Stand-Right Assy.	N/A	N/A	151-701-W05073	151-701-W05073	151-701-W05073
Clamp plate	154-900-W065	154-900-W065	N/A	N/A	N/A
Power cord	600-013-WB55Z0	600-013-WB55Z0	600-011-SR20Z0	600-011-SR20Z0	600-011-SR25Z0
12V supplier wire	631-150-066280	631-150-066280	631-150-066280	631-14A-144392	631-100-126280
IR wire	631-16A-144390	631-16A-144390	631-14A-144392	631-150-066280	631-12A-144392K
Mainboard Wire	631-250-136284K	631-250-136284K	631-200-136286	631-200-136286	631-200-136286
Amplify control wire	631-300-045283	631-300-045283	631-250-056281N	631-250-056281N	631-200-045280
LED backlight control wire	631-700-064282	631-700-064282	631-550-146382	631-550-146382	631-550-146382
FFC-LVDS Wire	634-120-414100	634-120-414100	634-108-414100	634-108-414100	634-148-514101
FFC-LVDS Wire	634-191-514100	634-191-514100	634-135-514101	634-135-514101	634-220-414102
FFC-LVDS Wire	634-600-514100	634-600-514100	634-228-514101	634-228-514101	634-225-514101
FFC-LVDS Wire	634-701-414100	634-701-414100	634-230-414102	634-230-414102	N/A
Module Assy	705-650-L7F20	705-650-L7F19	705-550-L7FA1	705-550-L7FA2	705-500-L7FA3
Speaker	82A-168-0810X4	82A-168-0810X4	82A-168-0810X4	82A-168-0810X4	82A-144-0810X7
Remote Controller	845-050-05B4	845-050-05B4	845-050-05B4	845-050-05B4	845-050-05B4

WARNING! This Service Hint is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this Service Hint by anyone else could result in serious injury or death.

© 2016 Panasonic Corporation of North America. All rights reserved. Unauthorized copying and distribution is a violation of law.